

PM CHECK LIST

Sterilizer PM Kit (RPI Part #PCK217) for parts to fit the Sentry sterilizer

PART **RPI PART #** STERILIZER PM TIP Door Gasket PCG020 Remove the old door gasket. Clean the gasket groove and chamber face ring surface. For easy install of the new gasket, use the "star" or "North-South-Fast-West" method (ie. begin installing the gasket at the top of the door, then the bottom, then the left side, then the right side, and then everthing in between making sure that the gasket fits flush without bumps or gaps). Bellows Unscrew the bellows cap through the PCB001 0-rina **RP0354** access port at the rear of the sterilizer or remove sterilizer cover. Clean out air valve housing. Use a cotton swab to clean the seat. Install the new bellows with the new oring – do not overtighten the bellows cap. Filter Fill Line **PCF009** Remove all trays from the chamber. Remove the chamber filter. Clean chamber. (Chamber) Install new filter making sure that it is placed at the bottom and center of the chamber. Reservoir Drain and clean the reservoir if necessary. Refill with distilled water only. Sterilizer After replacing the PM parts: Check the reservoir and clean if dirt or debris are present (Note: Debris is the number one reason for Steam Trap/Bellows failure). • Refill reservoir with distilled water only. • Conduct a temperature check using a Max Register Thermometer (RPI Part #RPT113). • Conduct a pressure check to identify any leaks that may need to be addressed.

