



"The Alternate Source"®

replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

RCK116 TIMER KIT (30 MIN)

INSTALLATION NOTES AND TIMER WIRING DIAGRAMS


Important!

Disconnect power from unit and allow to cool before servicing.

- **Removing the Timer Knob.** On some of the earlier units, the timer knob is tightened to the unit by an Allen Screw. Before removing the knob, loosen the screw.
- **Spacer is not needed.** On some units that have the buzzer mounted on the timer, a spacer was used. Remove and discard the spacer as it is not required with the new timer.
- **It may be necessary to drill holes to mount new Timer.** On some units, a nut is used to secure the timer to the front panel. On these units, it is necessary to drill two new holes on the front panel to secure the new Timer. To begin, from the center of the shaft hole, at the 12:00 position, measure 9/16" upwards, make a mark, and center punch. Next, at the 6:00 position from the center of the shaft hole, measure 9/16" downwards, make a mark, and center punch. At the center marks for each of the hole, drill a 3/16" hole. Use two #8-32 x 5/16" screws to secure timer.
- **Mounting the Buzzer Assembly.** Remove the top, left screw that secures the Relay Assembly to the bracket on the right side of the chamber. Position the Buzzer Assembly against the same bracket and secure the buzzer to the bracket using the same screw.
- **Connecting electrical leads.** See *Timer Wiring Diagrams* and note that the #2 contact and the "B" positions are reversed on the RPI Timer when compared to the OEM Timer.
- **If Wire Harness is too short.** When upgrading to this newer style Timer (RPI Part #RCT107), the original wire harness may be too short. To extend the length, install the enclosed Wire Harness (RPI Part #RCH117).
- **Buzzer adjustments.** Adjust the loudness of the buzzer by turning the adjustment screw clockwise for a softer signal or counter-clockwise for a louder signal.


RCK116 INS REV A (12/08)

RPI TIMER (RPI PART #RCT107)

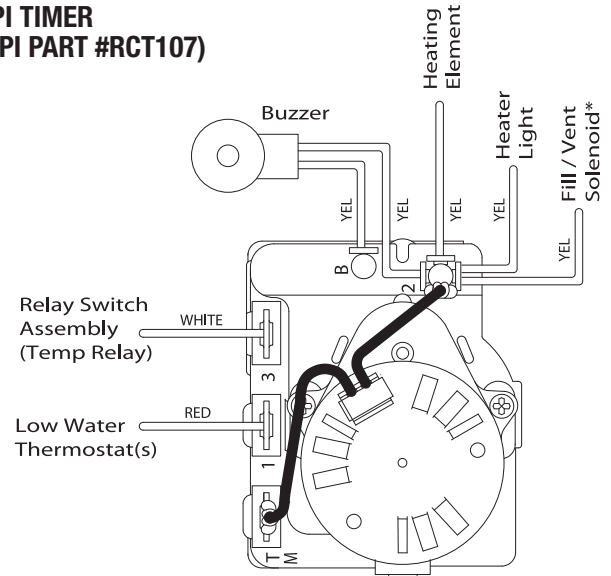

* Fill/Vent Solenoid lead applies to Models M7-020 -021 and -022 only.

ORIGINAL OEM TIMER

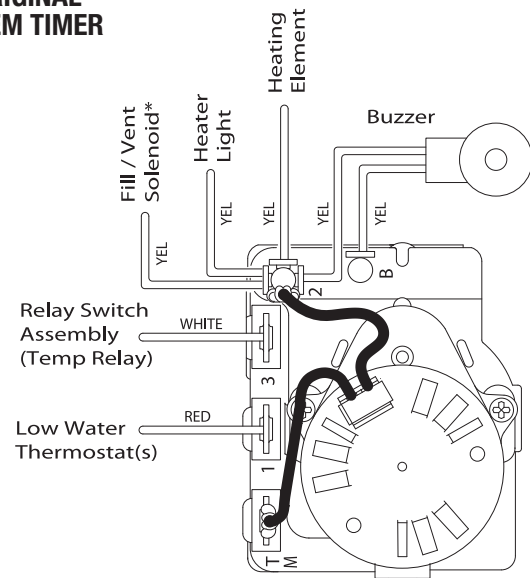

* Fill/Vent Solenoid lead applies to Models M7-020 -021 and -022 only.